




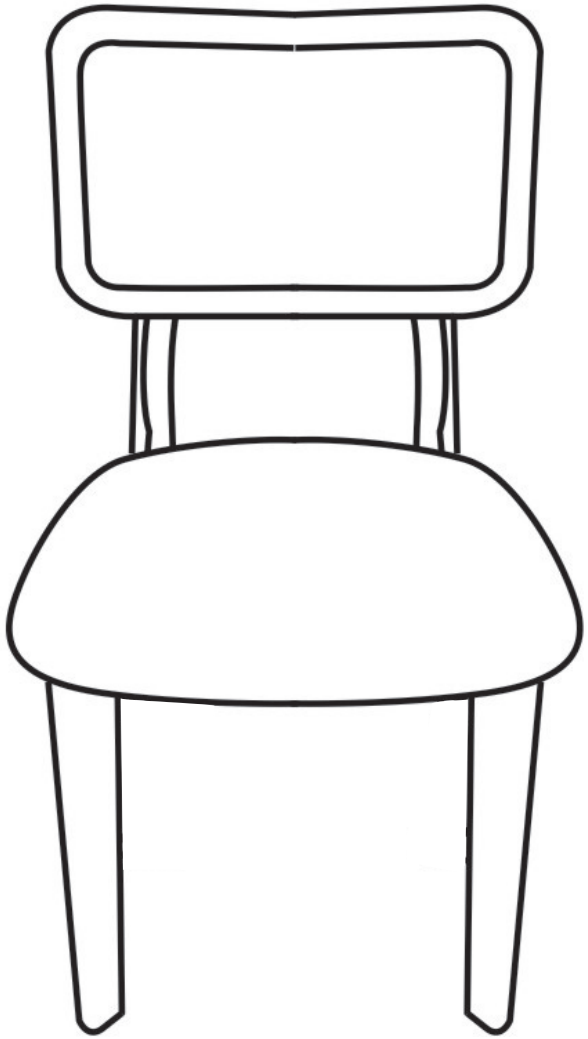

SPARE PARTS

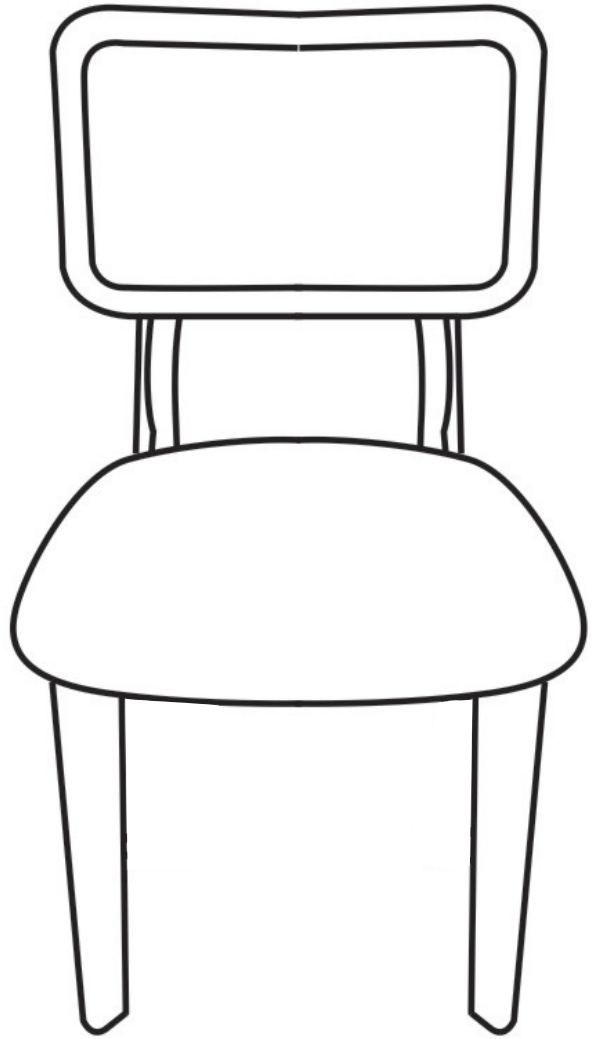


Ax1

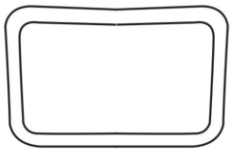

Ex1



(6x20mm)
Ix6

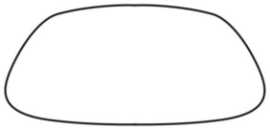


Bx1



Fx1




(6x30mm)
Jx2

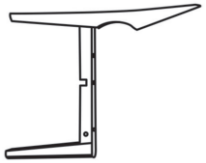


Cx1




Gx15



(6x60mm)
Kx7

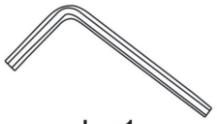

Lx1

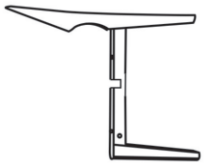

Dx1



Hx15



Mx4

ASSEMBLY INSTRUCTIONS

