

ASSEMBLY INSTRUCTIONS

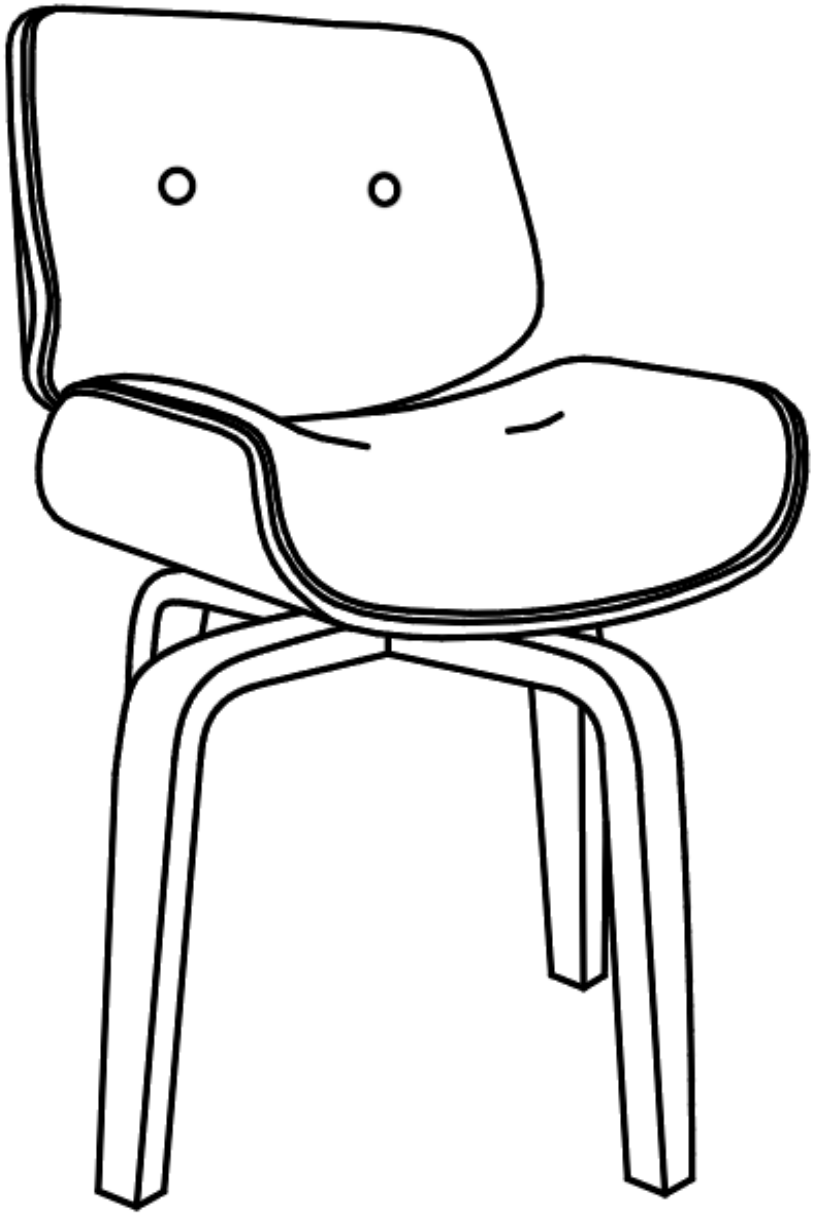

www.artleon.com
Email: hello@artleon.com

If you feel that the chair is not balance you can adjust the foot nails to level according to your needs

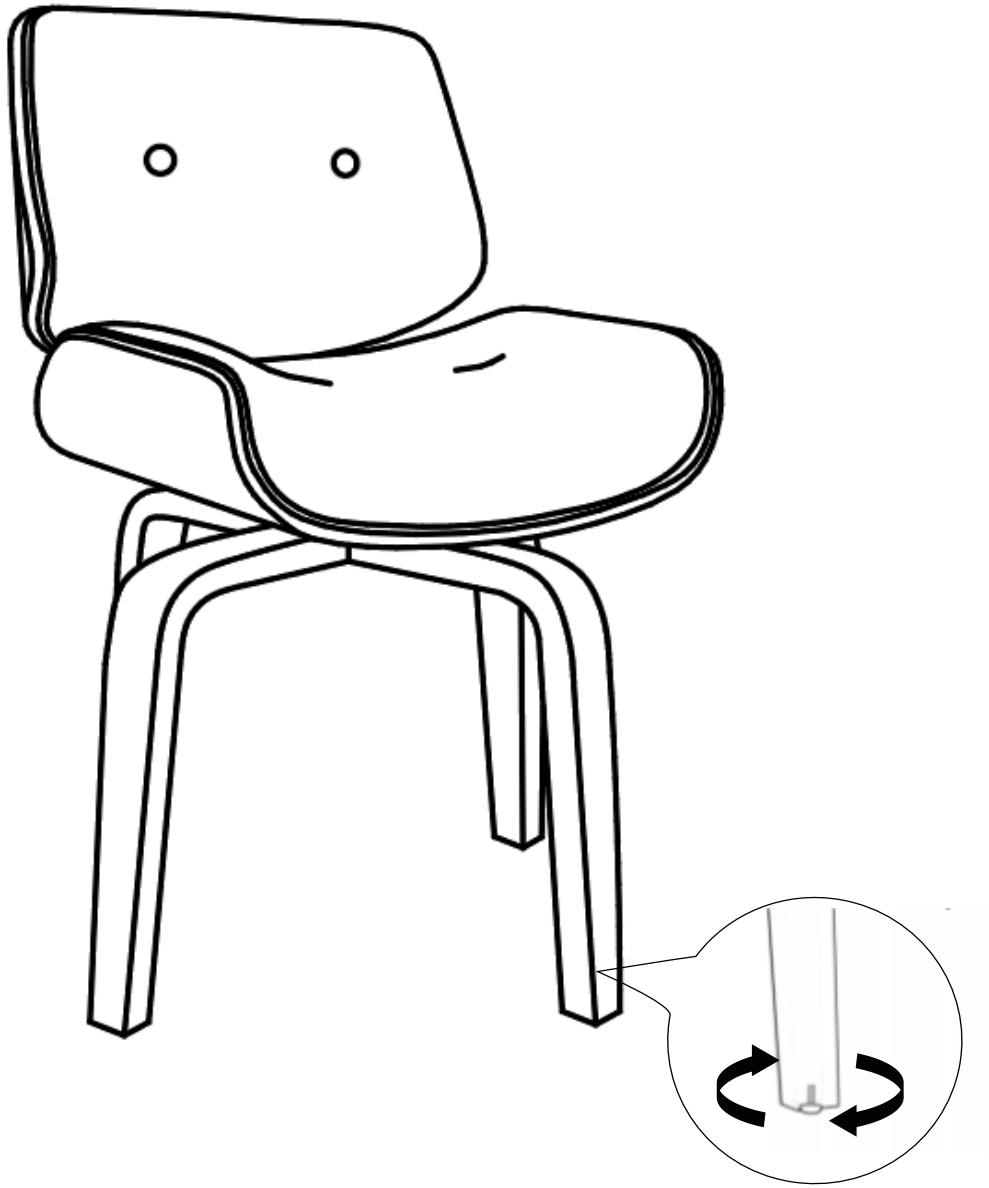

Be sure to keep spare parts.

If screws or nails of a product are damaged or lost, or screws or nails of a subsequent product are damaged or aged, spare parts can be used to replace them.

1



Ax1



Bx1




Cx1



Lx5

Noted:
Tight the screws
(L) 50% in Step 1

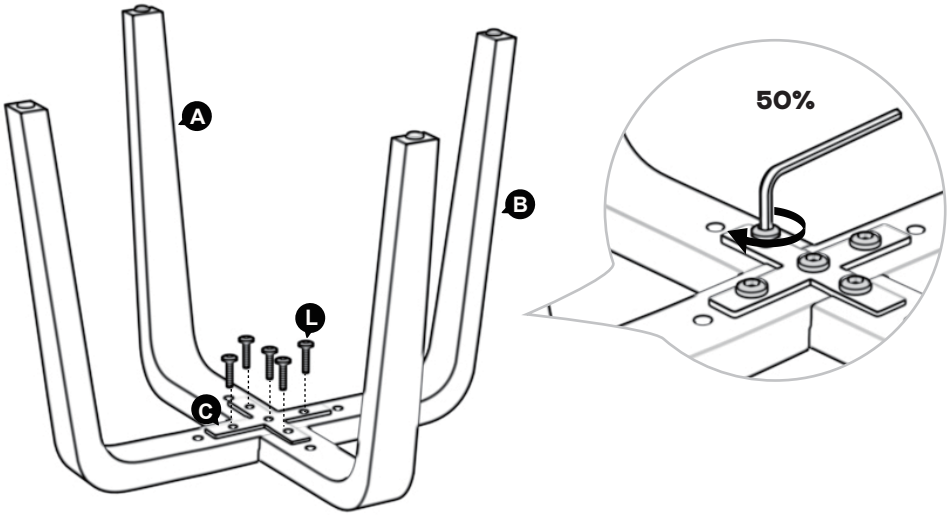


2



Dx1




Lx4

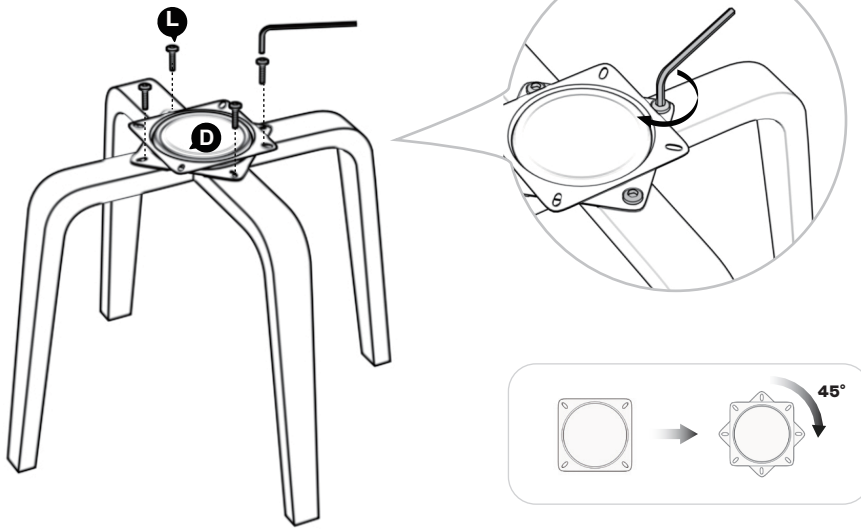

3

Noted:
Tight the screws(L)
100% in Step 3

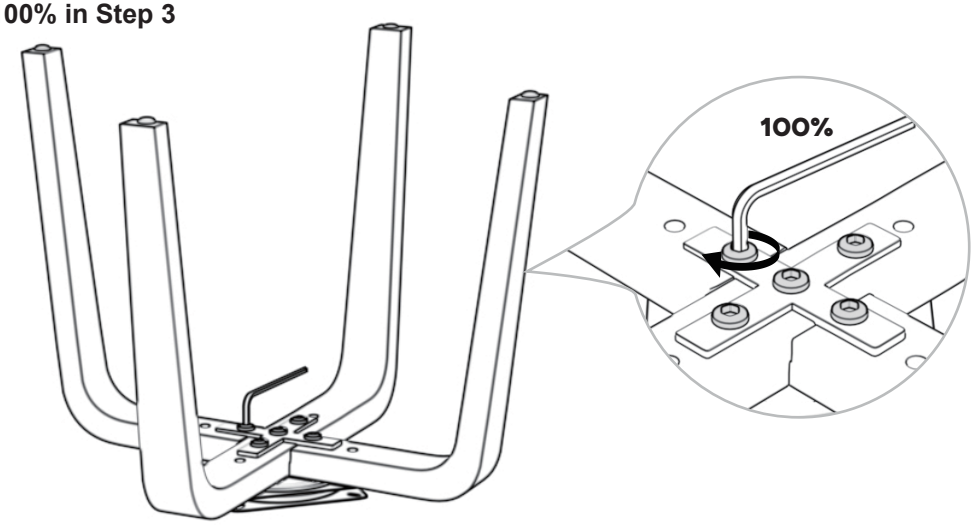

4




Kx3



Ex3




Fx3



Mx1



Nx1

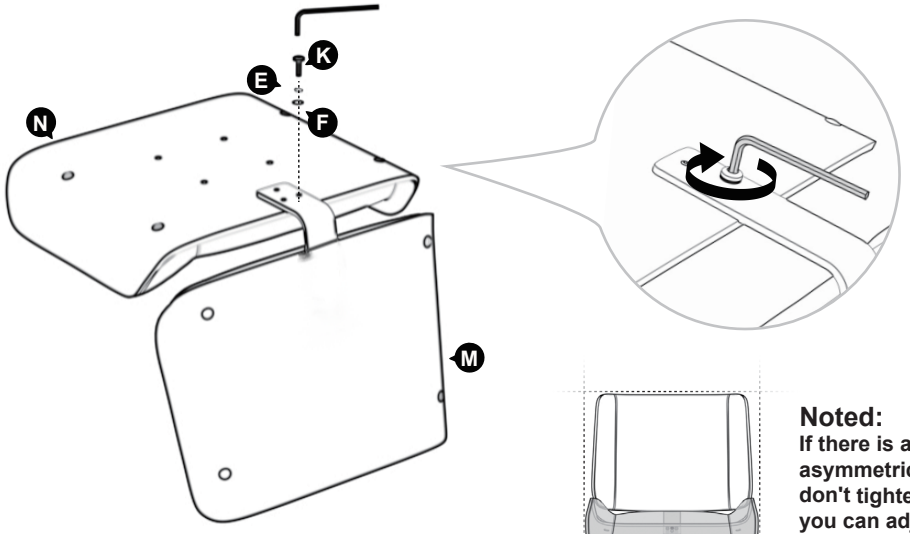

Noted:
If there is a skewed asymmetrical screw, don't tighten it, you can adjust it

5




Kx4




Gx2



Hx2

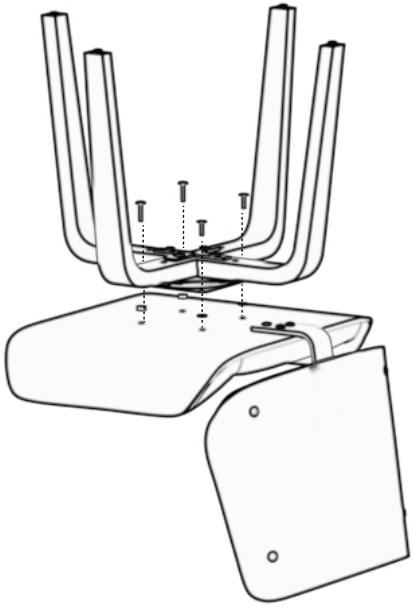

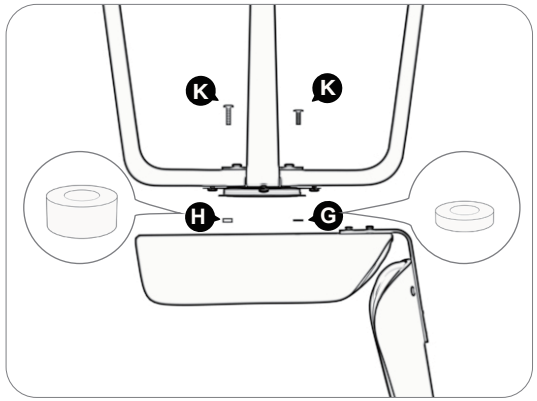



6




Jx4

Last step, please adjust the chair to the horizontal position, otherwise the wooden foot may break risk.

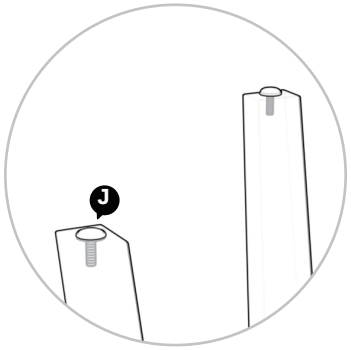

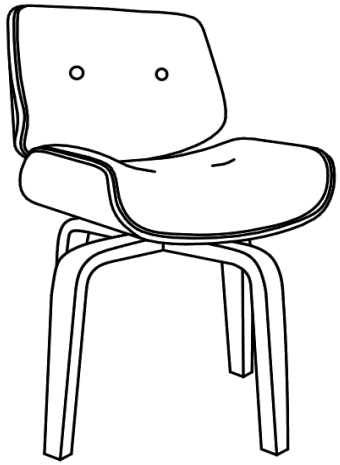


SPARE PARTS

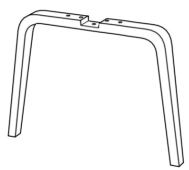


Ax1



Bx1



Cx1




Dx1




M6 Spring Washer

Ex3+1Ext




M6X18X1mm Steel Washer

Fx3+1Ext



5mm thickness Rubber Washer

Gx2+1Ext



10mm thickness Rubber Washer

Hx2+1Ext




Ix1




Spare foot p in

Jx1




M6X25mm

Kx7+1Ext




M6X30mm

Lx9+1Ext

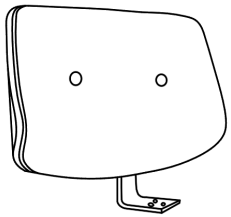

Mx1

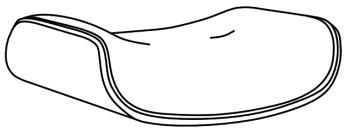

Nx1